 


**MEGATEK**

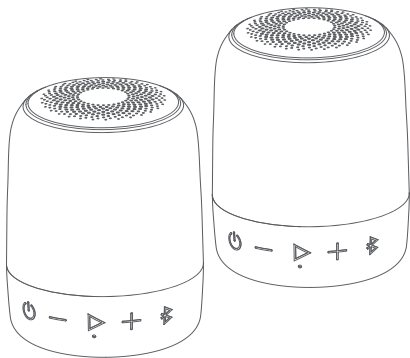

# AuraStage 2

## User's manual

*Before using your new product, please read these instructions to prevent any damage.*

Model: T4 Pro



## **Contents**

Safety Instructions .....	01
Specifications .....	02
Package Contents .....	02
Product Overview .....	03
Positioning the Speakers .....	07
Using Your Speakers .....	08
TWS Pairing .....	11
Connect to a Bluetooth Device .....	14
Hands-Free Calling .....	15
AUX In Mode .....	16
Charging .....	17
FCC Statement .....	18
12 Months Warranty .....	19

**Important Notice:**

Please fully charge your Bluetooth speakers before first use. Your new speakers may arrive with their built-in batteries low, and low batteries may cause sound distortion, unstable connection etc.

## Pairing the Speakers for True Wireless Stereo

These speakers can be used as a pair, or individually. To use individually in different rooms, simply connect both speakers to different Bluetooth devices. In order to use the speakers as a pair in true wireless stereo (TWS) mode, follow the TWS pairing process in the user manual.

## Safety Instructions

- Avoid dropping.
- Do not disassemble.
- Do not submerge in water.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Use original or certified cables.
- Do not use any corrosive cleaner/oil to clean.

## Specifications

- Micro USB socket: DC 5V 1A
- Audio output: 2 x 6W RMS
- Li-polymer batteries: 2 x 1000 mAh
- Charging time: 3-4 hours
- Size: 3.9 x 2.8 inches
- Bluetooth: Version 4.2
- Pairing name: Megatek AuraStage 2
- Bluetooth wireless range: 33 feet (line of sight)
- TWS wireless range: 15 feet (line of sight)

## Package Contents



2 x AuraStage 2



1 x User's Manual



 
1 x Micro-USB  
Charging Cable



1 x 3.5mm  
Audio Cable

## Product Overview

### Front View

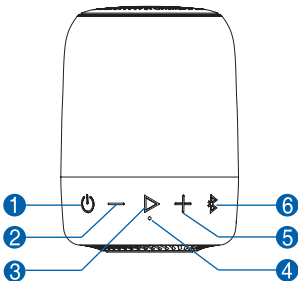

#### 1

##### Press and hold:

- Power on/off.

##### Press and release:

- Switch LED light modes / Turn off LED lights.

#### 2

##### Press and hold:

- Skip back (Bluetooth mode).
- Decrease the volume progressively (AUX mode).

##### Press and release:

- Decrease the volume in steps.

**3** ▶**Press and hold:**

- Reject call / End call (Bluetooth mode).

**Note:** Not available in AUX mode.

**Press and release:**

- Play / Pause / Answer call / End call (Bluetooth mode).
- Mute / Unmute (AUX mode).

**4** LED Indicator

- Solid Red: Charging.
- Off: Fully charged / Power off.
- Flashing blue quickly:  
Searching for Bluetooth devices.
- Flashing blue slowly: Bluetooth paired (TWS mode).
- Solid blue:  
Single-speaker mode: Bluetooth paired.  
TWS mode: Native speaker.
- Solid green: Aux-in mode.

**5** +**Press and hold:**

- Skip forward (Bluetooth mode).
- Increase the volume progressively (AUX mode).

**Press and release:**

- Increase the volume in steps.



### **Press and hold:**

- Unpair your current Bluetooth device and search for new devices. Press and hold it again to connect back to the last paired Bluetooth device.

 
### **Press and release:**

- Operate either of the two speakers, it will search for the other for TWS pairing, a tone will sound when pairing is completed. When TWS paired, both speakers will work together as one 2.0 wireless speaker system, with only one Bluetooth pairing ID ("Megatek AuraStage 2") for pairing with external Bluetooth device.

Press it again to disconnect TWS pairing.



## Back view

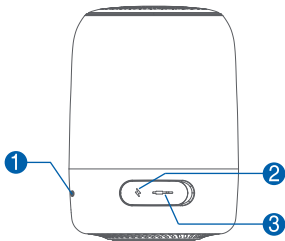

### 1 Speakerphone

- Built-in speakerphone for hands-free calls.

### 2

- DC 5V Charging Port.

 
### 3

- 3.5 mm Aux Input.

## Positioning the Speakers


It is important that you consider carefully in advance where your Bluetooth Speakers will be situated and make sure that they are:

- On a flat and stable surface.
- At least 1 meter away from other electrical appliances to avoid interference.
- Where they will be in range of the connected or 'paired' Bluetooth device (e.g. iPhone/Android phone/computer), which is about 33 feet or less in line of sight.

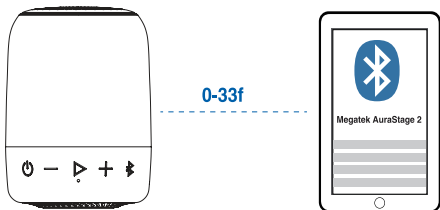


## Using Your Speakers

 You can use both speakers separately as two normal Bluetooth speakers, or pair them together as one 2.0 wireless stereo speaker system with its built-in True Wireless Stereo (TWS) technology.

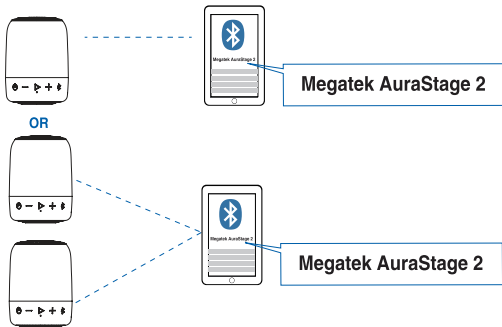

## Power On

 Press and hold the Power button for 2 seconds to power on - the LED indicator will flash blue with an audible alert.

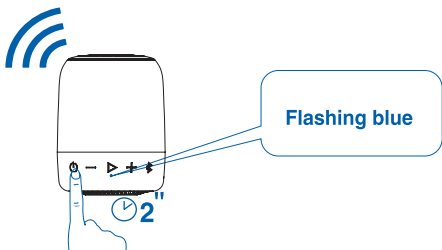


Flashing blue

Power On.

## Power Off

 Press and hold the Power button for 2 seconds to power off - the LED indicator will turn off with an audible alert.

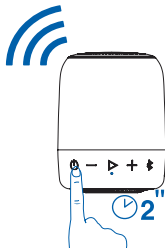

### Note:

- When the two speakers are TWS paired, press and hold the Power button on either of the speakers for 2 seconds and then both speakers will switch off.
- If the Bluetooth speakers don't receive an audio signal for approximately 15 minutes they will power off automatically.

### Adjusting the volume

- Press and release to decrease the volume in steps.
- Press and hold to progressively decrease the volume (AUX mode).



 
- Press and release to increase the volume in steps.
- Press and hold to progressively increase the volume (AUX mode).

**Note:** You will hear an audible alert when the minimum or maximum volume level has been reached.

### TWS Pairing

For first time TWS pairing, turn on both the speakers and wait for about 30 seconds, they will pair automatically via TWS when they are within the range of 15 feet or less, line of sight, a tone will sound once TWS pairing is completed.

In TWS mode, one speaker will work as host speaker and left channel with LED indicator flashing blue, and the other as right channel with LED indicator solid blue.

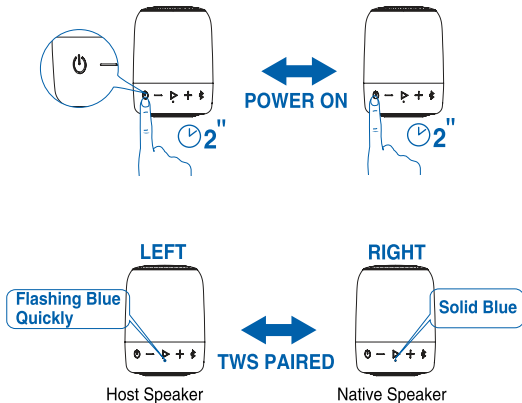


Flashing blue quickly

 
Host speaker searching for Bluetooth device.



Solid blue

Native speaker with TWS paired.

Now that you have paired both the speakers via TWS for the first time, they will pair via TWS immediately next time when both power on and within TWS range. Or you can press and release the  button on either of the two speakers to manually start TWS pairing or disconnect them.

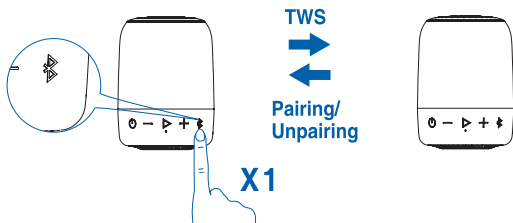


**Note:** TWS pairing is not available when both speakers have already paired with Bluetooth devices, disconnect at least one speaker before TWS pairing.



## Connect to a Bluetooth Device

 Turn on both speakers, enter Bluetooth mode on your Bluetooth enabled device and search for "Megatek AuraStage 2 " and select it to pair, a tone will sound once the pairing is completed. When paired, play music on your connected device.

The above pairing processes also apply to one single speaker being used separately.

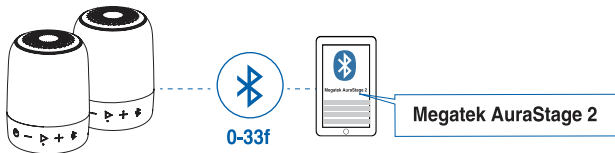

Flashing blue slowly

Host speaker with Bluetooth paired.




Solid blue


Native speaker (TWS mode).  
Bluetooth paired (single speaker mode).

Now that you have paired your device with the Bluetooth speakers, it will automatically connect to them when it is within range of 33 feet or less, line of sight.


**Note:** You can press and hold the  button to unpair your current device and search for new devices.


## Hands-Free Calling

 To answer/end a call; Press the  button on the host speaker (Bluetooth mode).

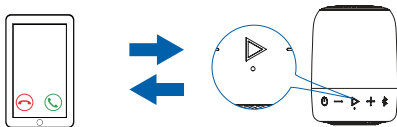**X1**

Answer / End call.

 
To reject a call : Press and hold the  on the host speaker for 2 seconds (Bluetooth mode).

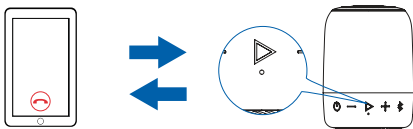**2"**

Reject call.

## AUX In Mode

 In TWS mode, insert the supplied AUX audio cable into the host speaker with the blue LED indicator flashing, and the two speakers will automatically switch to AUX IN mode, with the LED indicator of the main unit changes into solid green. The same operation will also apply to either one speaker working individually.

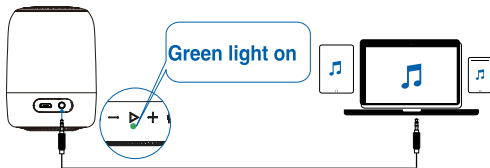

Solid green


AUX IN mode.

To gain optimal volume levels, adjust the volume level on both the secondary device and on the speaker.

**Note:** After you have finished listening to your external device you must unplug the audio cable from the Aux in socket, to be able to use them as Bluetooth speakers again.

## Charging

 When the battery power is extremely low, you will hear three audible alerts every 60 seconds before the speakers are forced to power off automatically. You should plug in and recharge your Bluetooth speakers straight away.

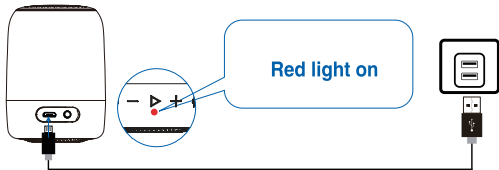

● Solid red                      Charging.

Off                                  Fully charged.

### Note:

- It will take approximately 4 hours to fully charge your Bluetooth Speakers. When fully charged, unplug the micro USB charging cables.



- Never open the device casing under any circumstances.
- Do not place any objects, such as burning candles on the device.
- Do not cover the device with newspaper, tablecloths, curtains, etc.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

## 12 Months Warranty

Thank you for choosing Megatek.

Megatek Electronics warrants your new product to be free from defects in materials and workmanship for a period of twelve (12) months, from the date of receiving. This warranty is in addition to your rights under Amazon's return and refund policies which apply to your purchase.

Megatek will provide you with a brand-new replacement (where possible) for this product if it becomes defective within the warranty period. Megatek will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please contact our Customer Service with your order ID and description of the problem, for warranty claim or any difficulties with your product:

**Email:** [service@megatekelec.com](mailto:service@megatekelec.com)

**Amazon Buyer-Seller Messages:** Go to Your Orders then find your order in the list, click Megatek Electronics link below the product title, click the Ask a Question button.



One (1) Year Full Replacement for  
Defective Product.

Questions or Problems? Contact Us:



[service@megatekelec.com](mailto:service@megatekelec.com)



[Amazon Buyer-Seller Messaging](#)